


When using the ZM Remote controller (ZM-9011, ZM-9012, ZM-9013, or ZM-9014 Remote Control Panel), be sure to read the separate instruction manual in conjunction with this supplementary manual.

1. CONNECTION


(Example of LINK A connections)

Side view of the ZM Remote controller

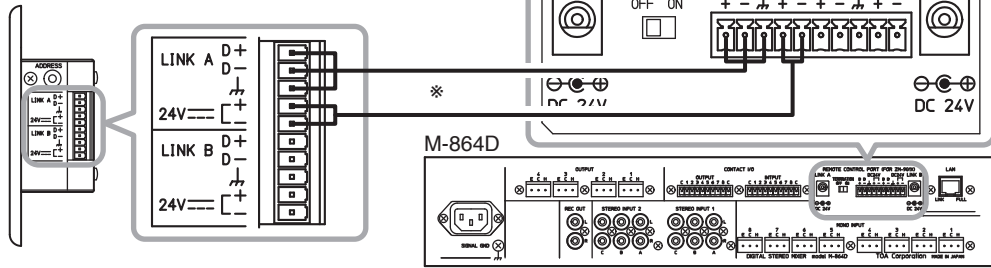

Notes

- Use the shielded Category 5 twisted pair LAN cable for connections between the ZM Remote controller and the M-864D Digital Stereo Mixer (* mark as shown above).
- Connect all cables as shown in the wiring diagram below.

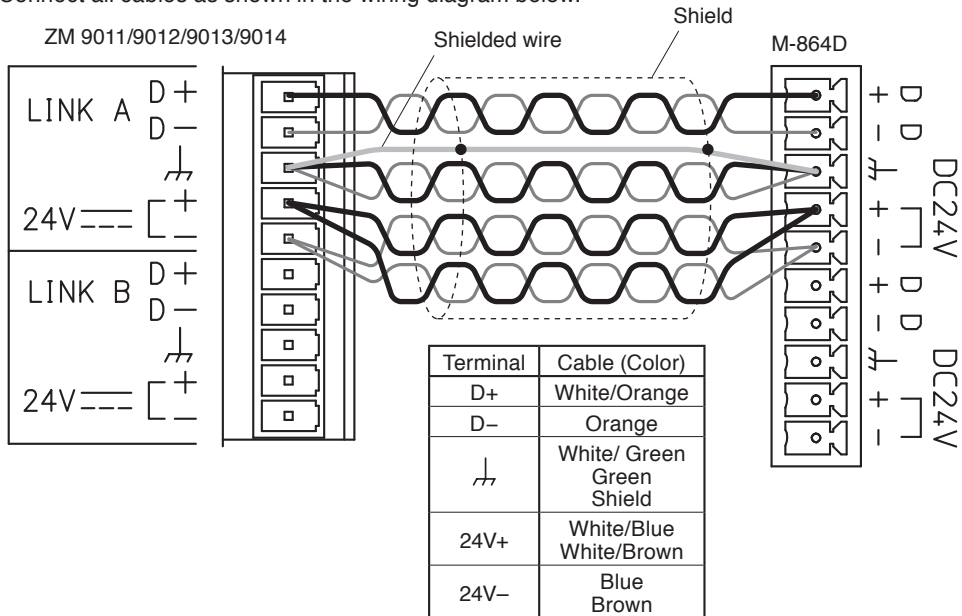

2. CABLE DISTANCE

Note

When 2 or more ZM Remote controllers are connected in a star topology, keep each cable length within 10 m (33 ft) from the M-864D to a branch point.

(When connecting 16 ZM Remote controllers)

