M-8080D Series

v2 to v3 Upgrade Manual


08.xx.2026

Upgrading the firmware from v2 to v3 requires **two steps**:

1. Update the **M-8080D LAN Firmware** (folder 1)
2. Update to the **latest M-8080D Firmware v3 version** (folder 2)

Before you start:

- Connect the M-8080D via the LAN port, your PC, and to the switch and DHCP server.

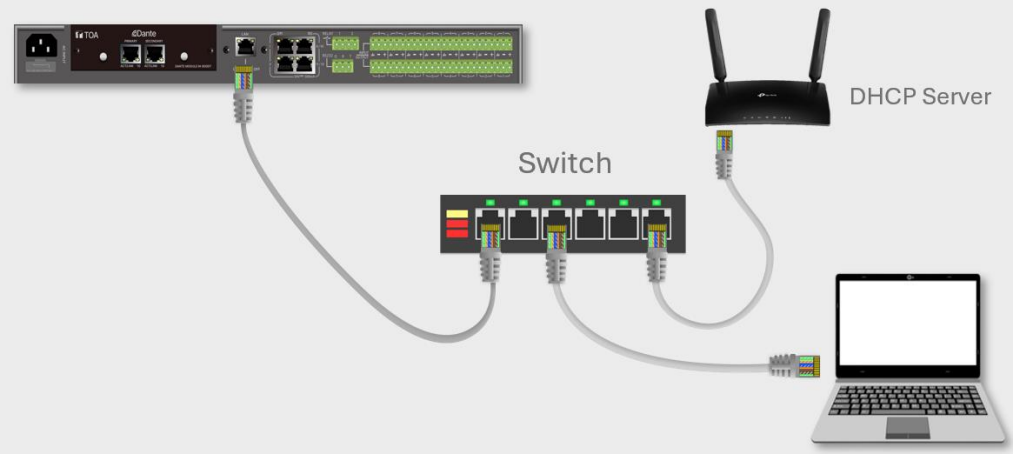


- Set your PC to obtain an IP address automatically.

Important:

- Update **remote devices first**, then the **M-8080D main unit**.
- All presets and settings will be erased during the update.

STEP 1 - M-8080D LAN Update


1. Open the folder
   "**1. M-8080D LAN Firmware Update Tool v1.0.2 20260115A**"
   and run "LAN Firmware Update Tool v1.0.2.exe"
2. Select Network "Ethernet" and press "**Confirm**".
3. Click "**Scan**" to search for the M-8080D unit(s).
4. Select a device with a version lower than 3.0 and click "**Update**" and press "**OK**".

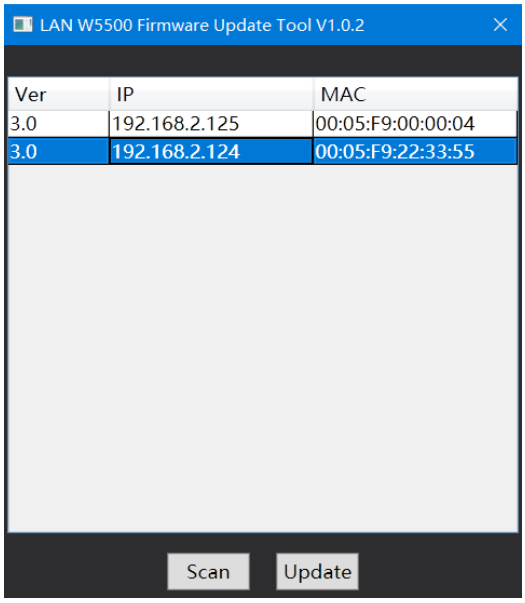


5. Wait for the update to complete.

STEP 2 - Update to v3


1. Open the folder
   "**2. M-8080D Firmware Update Tool v3.0.0 20260612**"
   and run "M-8080D Firmware Update Tool v3.0.0.exe"
2. Select Network "Ethernet" and press "**OK**".

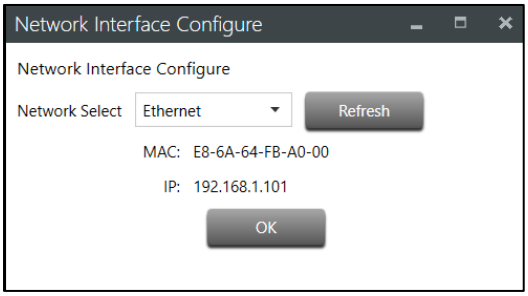

3. Click “**Scan**” to search for the M-8080D unit(s). A new window will appear.

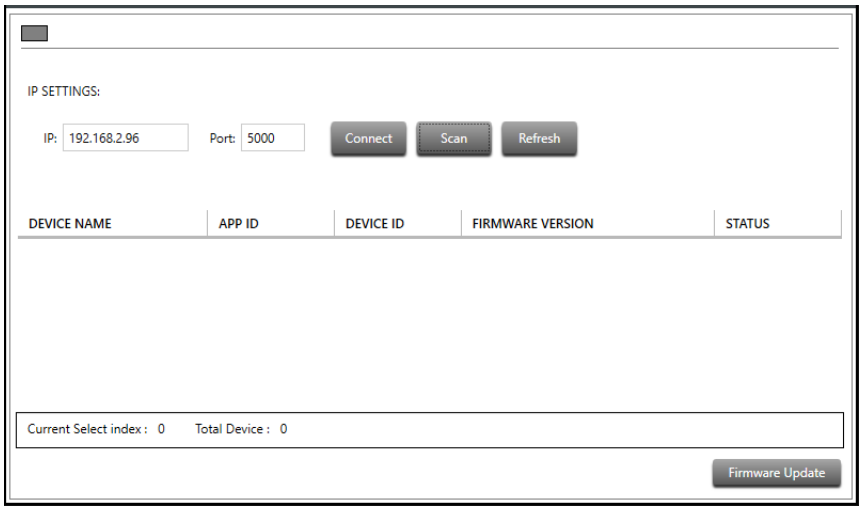


4. In the new window, click “**Scan**”. A list of units within your network will appear

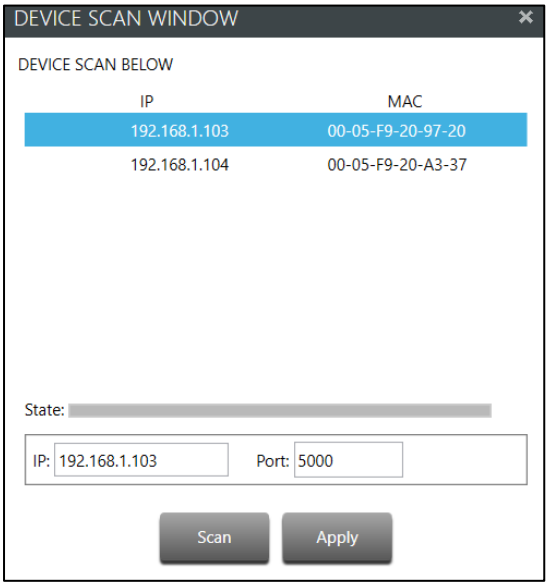


5. Then select your device’s IP address and click “**Apply”**.
6. Click “**Connect”**. The list of the connected remote devices will be shown.

7. Choose one device from the list and click **Firmware Update**.
   Important: First update the remote devices and at the end M-8080D unit.

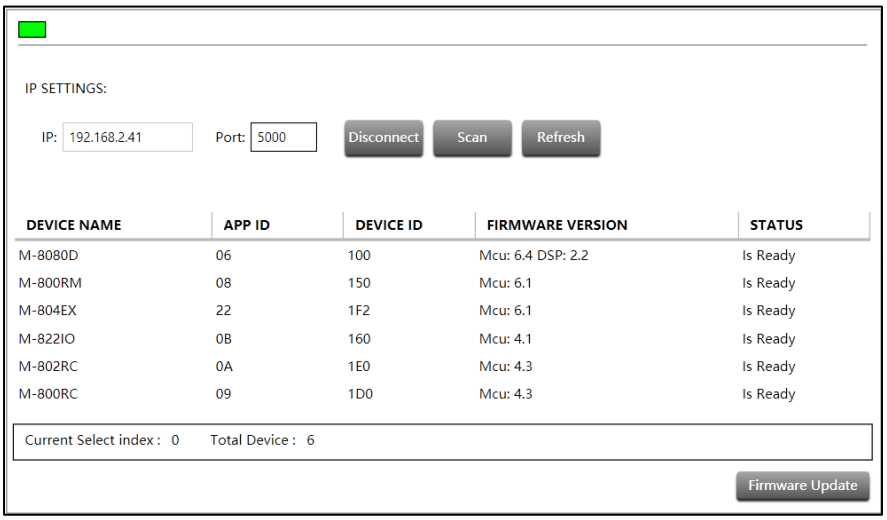


Confirm "**Yes**" to restore factory settings:

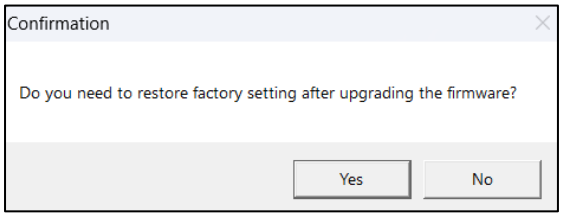


Wait until the update finishes. Do not disconnect any cables.

8. When update is done, click "**OK**", then close the firmware update process window.

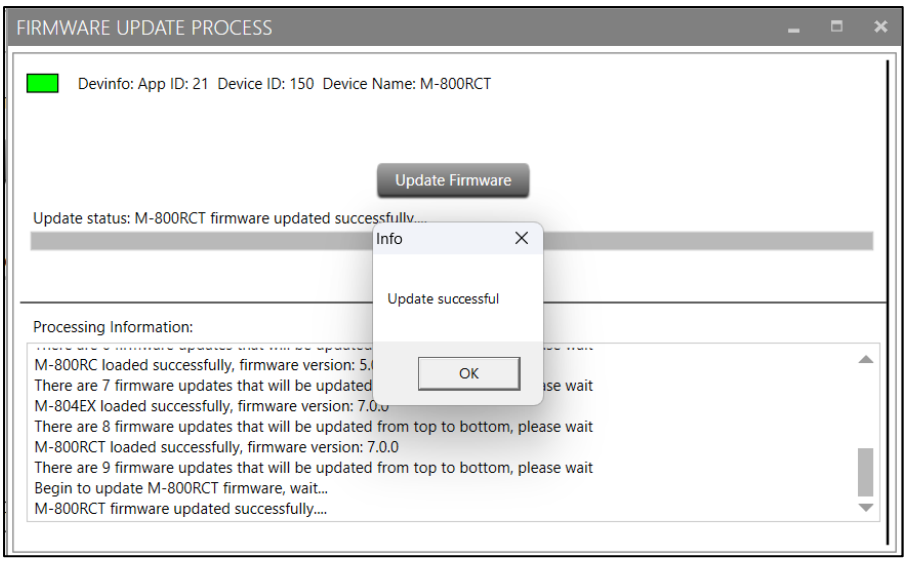

Then click “Refresh”.

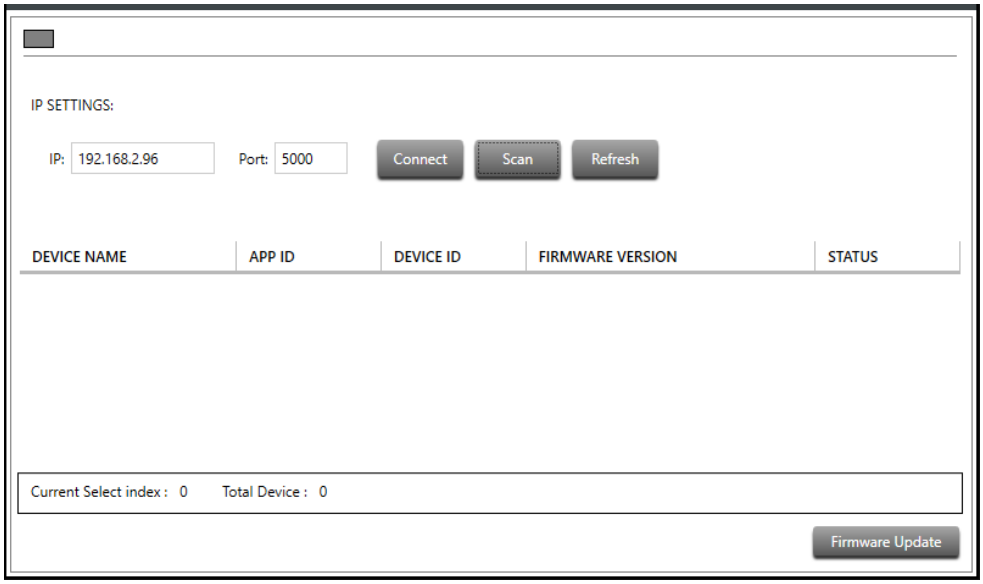

The list of the devices will be shown again.

9. Repeat for any remaining devices.

If your M-8080D **does not use Dante**, the process is complete.

For Dante Units:

*If you use M-8080D with Dante, check your M-800DT production lot. Devices with a lot **older than 26C** require an additional Dante update.*